Step5/7-Programming system PG-2000

Installation note:

Load your license file using the link given in your personal license email. The password for extraction can also be found in this email. Then copy this file into the folder of the installed PG-2000 software (demo version). After restarting the software, your license is active.

https://www.tpa-partner.de

Menutree Website:

- + Products / docu / downloads
 - + Software
 - + Programming-software PG-2000 Step: + STEP 7 (Freeware)

QR-Code Website:






Please make sure to update your drivers before using our products.

Data backup S7-PLC PN-port on SD-card via dig. IO



Via digital input triggered DB-backup/-restore without additional PC via PN-port to SD-card

User dependant network access

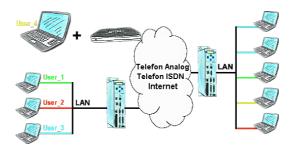

You have PLC/LAN-participants different supplier in your network and everybody should have access to this network? No problem, you give every supplier a VPN-username and passwort, define in the destination device a user-dependent network-access and after positiv login he only can communicate to the released ip-addresses.

24V-supply from the PLC



You want to install your ALF directly in the switch-board and would like to use the 24V of the existing S7-PLC? No problem, connect the open ended side of the Kabelbrücke to the 24V port on your ALF and the bus-side on the MPI- or Profibus of this PLC. Even the ALF is supplied above this PLC.

Remote-maintenance Beckhoff-PLC



Remote-maintenance of a Beckhoff-controller with network-connection via secure VPN-tunnel of the TeleRouter

S5-PLC over LAN



Communication with S5-PLC via Ethernet, just how and with what?

Data-communication with S5-PLC from PC or other devices via network, which interface is required. Questions you don't have to worry about. With "S5 over LAN" you get the right interface-products for your interface of the PLC.

Which one you use then is up to you.

Remote maintenance of a S7-PLC[FREEWARE without support]



You have to solve a problem in the PLC-program, but the installation is not placed nearby? No problem, start your PG-2000-software with "option teleservice", activate your modem and after selection intra PG-2000-software access to the PLC is possible as if being on-site.