

## Step5/7-Programming system PG-2000

### Installation note:

Load your license file using the link given in your personal license email.  
The password for extraction can also be found in this email. Then copy this file into the folder of the installed PG-2000 software (demo version).  
After restarting the software, your license is active.

<https://www.tpa-partner.de>

### Menutree Website:

- + Products / docu / downloads
- + Software
- + Programming-software PG-2000 Step!
- + Basic packages AWL

### QR-Code Website:




```

NOTIZEN: 1 USD: 0 HJUTP11KPROGRAMPT
[EN] -Start=50,0
[EN] V7 0004,0
[EN] V 0
[EN] H 000,0
[EN] -Start=50,0
[EN] -Start=50,0
Name: [EN] FB 20
Name: [EN] FB 20
Name: [EN] FB 20
Name: [EN] FB 20

```


Please make sure to update your drivers before using our products.

## Visualisation via 3964R-interface without using the protocol itself

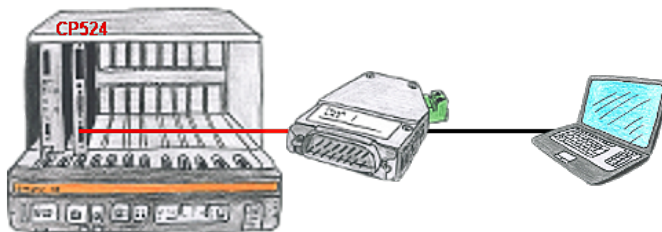


Your visualisation-software does not support a 3964R-protocol, but you have to apply this package? No problem, connect the 3964R-LAN to your CP and activate the RFC1006-emulation in the module. Now your software gets the data from the module via RFC1006, which in turn communicates with the assembly via 3964R.

## Data backup S5-PLC on SD-card

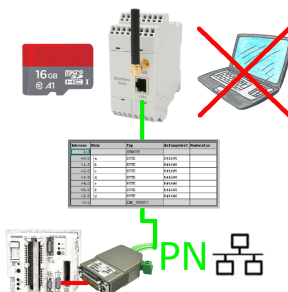

S5-PLC triggered DB-backup/-restore without additional PC via PG-socket and Ethernet on SD-card

## Connecting S7-PLCs without head-station

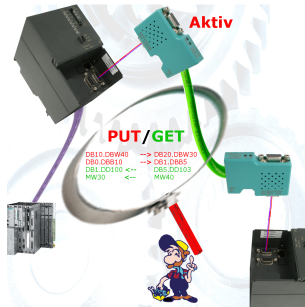


## Direct data-exchange between S7-PLCs with S7-LAN.

Thanks to active PUT/GET directly in the module without superordinate head control!

Transfer data directly from one MPI/Profibus-PLC to another.


Bus independent! MPI-bus Profibus / Profibus Profibus / MPI-bus MPI-bus

Remote maintenance / telecontrol of PLC-devices
-------------------------------------------------

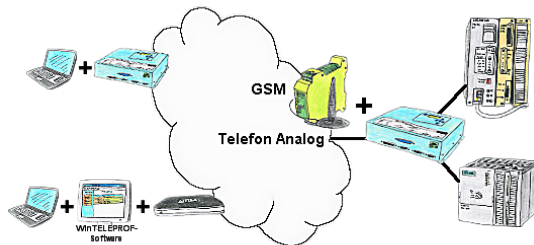

Access to the connected PLC takes place by coupling via Analogue-, ISDN- (only with AB-adapter) and GSM-(only with external GSM-modem)-line.

## Failure report transmission released by the PLC

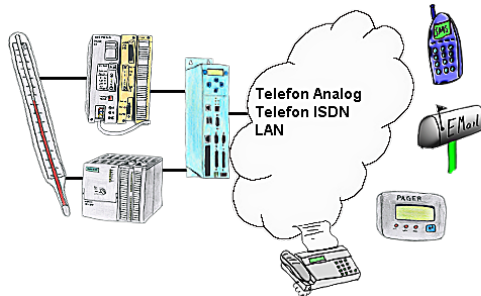

Your outstation reports the current value cyclically, or in case of malfunction the status via FAX, as SMS to your mobile phone, to your pager or also via e-mail.

## Remote maintenance / telecontrol of PLC



The access to the connected PLC with the Siemens TS-software or PG-2000 including TS-option results of coupling via Analogue-, ISDN- (only with AB-adapter) as well as GSM-line.