

Handling-Shortinstruction for MPI/DP-bus-communication-analyzer



MPI/DP-bus-communication-analyzer 9352-BUS-SCAN for Simatic S7-300 up to S7-400


The module will be connected direct to the mpi/profibus-port of the S7-plc. The connection of the RJ-45-port will be the same connecting a PC to the network. This module don't use a integrated keyboard so the configuration will be done with the integrated webserver. For this action, you connect the PC and this module via network and write down in the browser the ip-address of MPI/DP-bus-communication-analyzer <http://192.168.1.56> (default address). Now, you are possible to change the configuration and the ip-address, also.

Please install after this the tool „TIC“ (see link to homepage) on your PC. With the help of this tool you can import any firmware updates or parameterize the device.

Connection of the external +24V

The external power supply of the The external supply of +24V DC is done via the integrated Phoenix jack . The external power supply voltage may exceed the value of +24 V DC \pm 20% not covered or exceed. The maximum current is 85mA.

The correct pinning of the connector is:

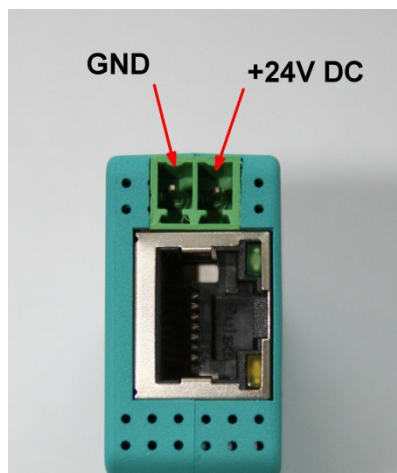

Before using the external supply, check the assignment of the Phoenix connector! The module itself is protected against polarity reversal, but this cannot be guaranteed if it is attached to another module.

Configuration-menu:

The screenshot shows a configuration menu with three main sections: General, Network, and Bus configuration. The General section has a Name field and a Load now button. The Network section has checkboxes for Use DHCP and Send Gratuitous ARP, and input fields for IP address (192.168.1.38), Subnet mask (255.255.255.0), and Gateway Address (0.0.0.0). The Bus configuration section has a Configuration dropdown set to 'from bus' and an MPI / Profibus section with a Local subscriber address field set to '2'. A Save button is at the bottom.

The MPI / DP bus communication analyzer only needs to enter the bus address of the participant whose communication is to be monitored. This is done in the "Observation target address" menu. Otherwise, the bus to be monitored and the network settings are specified here. You can also assign a device name. This is then also visible in the TIC if you are using several devices in the same network.

As soon as this configuration is saved, this communication can be observed in the "Record" menu.

The screenshot shows the configuration section of the Record menu. It includes buttons for start recording, clear table, and reset filter. The filter settings section has input fields for source address (SA), source SAP (SSAP), and destination SAP (DSAP), and a checkbox for 'only these protocols'. Below is a protocol table with columns SA, DA, SSAP, DSAP, Type, and Description. The table is currently empty with the message 'No protocols were recorded yet!'. At the bottom, there is a 'protocol details' section with the instruction 'Please select a protocol from the table for more details!'.

The recording is started with "start recording". Similarly, the stop button "stop recording". "Clear table" deletes the log table for a recording. The same can be achieved by leaving the menu and reopening it.

"Reset filter" resets the filter settings to the factory settings.

Possible filter settings:

- source address (SA): Filtering according to the sender address of the protocols
- source SAP (SSAP): Filtering according to SSAP of a communication
- destination SAP (DSAP): Filtering according to DSAP of a communication
- variables read/write: Only shows logs that read / write data

All recorded communication protocols are shown in the protocol table. By clicking on a protocol you get a list of this special protocol in the protocol details.

You can find more about the working method, current firmware versions and the device manual on the product page of the device.


<https://www.tpa-partner.de>

(c) copyright 2000-2024 by TPA

Menutree Website:


- + Products / docu / downloads
- + Hardware
- + Analysis technic
- + MPI/DP-bus-communication-analyz

QR-Code Website:

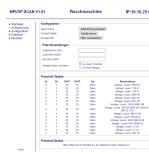


Please make sure to update your drivers before using our products.

Data backup S5-PLC on FTP-server via dig. IO

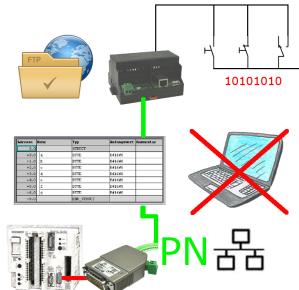

Via digital input triggered DB-backup/-restore without additional PC via PG-socket and Ethernet to FTP-server

DHCP-server/client

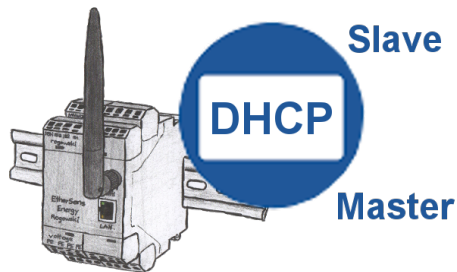

You need a DHCP server on your network. Activate this functionality in your EtherSens-device and you have immediately a server in the network. Consistently, the EtherSens-device also can act as DHCP-slave.