
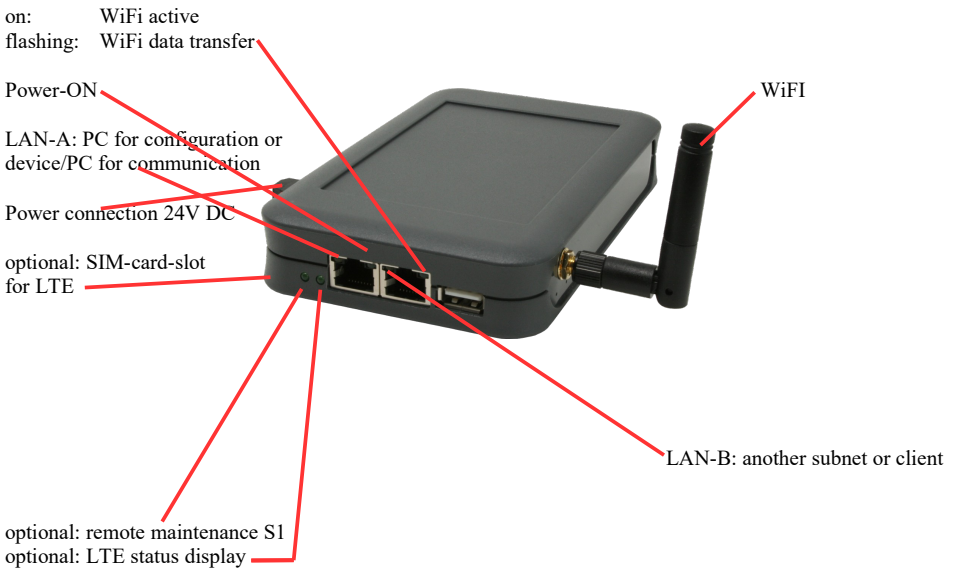


Handling-Shortinstruction V1.0 for CONNECT-HS-Router + CONNECT-Router industrial WiFi-router


Connectors:

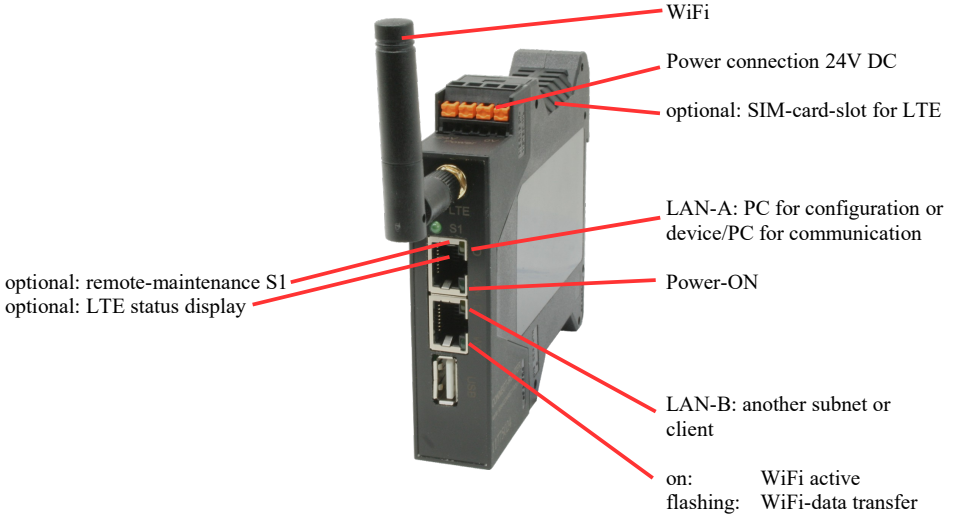

Power connection :

Voltage: 24 V DC \pm 20%
power consumption : 1,2W

Assignment of voltage plug :

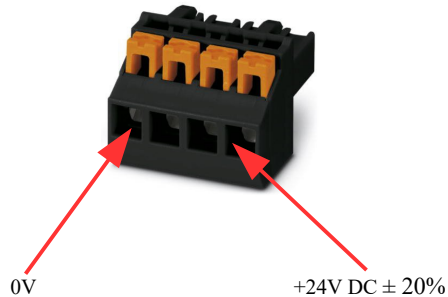

Initial start-up:

- CONNECT-Router creates a WLAN network with an SSID „CONNECT WiFi“ with active DHCP master (laptop is automatically assigned an IP address)
- Connect laptop to this WiFi network and open with browser webserver with IP: <http://192.168.2.1>

or

- Connect the PC to the LAN port using a LAN cable
- PC must be in the 192.168.2.xxx subnet

Starting page:

commissioning

Before you can start to use the device you will have to set up some basic settings. Afterwards your device will be immediately ready for the communication.
On the page "configuration" you can change these as well as some further settings at any time.

basic configuration

In the first step you have to specify how you want to use your device.
Specifying the name is optional.

device name:

operation mode: Bridge
 Router

Basic configuration:

Assign a name to the device for identification

2 operating modes are possible with the CONNECT-Router :

- Bridge Multiple interfaces connected to a common network
- Router Separation between LAN and WAN (Internet) network

For operation mode Bridge:

LAN configuration

In the last step you have to configure how your device should be connected with the local network.

interfaces: LAN-A
 LAN-B
 WLAN

IP settings

IP configuration: DHCP
 manually

DHCP server: enable

IP address:

subnet mask:

WLAN settings

search:

mode: ▼

SSID:

security type: ▼

channel: ▼

LAN configuration:

Determine the interfaces that should be bridged

IP settings:

- IP configuration: DHCP (parameters come from a DHCP master on the network)
Manual (IP address + subnet mask fields must contain valid values)
- DHCP server: Device is a DHCP server on the selected interfaces
- IP address: IP address of the device
- subnet mask: Subnet mask of the device

WLAN settings:

- Search: Searches for accessible WiFi networks and lists them. By clicking on an entry, the selected WiFi network is used for connection
- Modus: Access-Point (AP) [the CONNECT-Router opens its own WiFi]
Client [the CONNECT-Router connects to an existing WiFi network]
- SSID: Name of the connected or created network
- Sicherheitsstufe: Open (no encryption)
WEP (either 5 or 13 ASCII/10 or 26 hexadecimal characters)
WPA (8-64 ASCII characters)
WPA2 (8-64 ASCII characters)
WPA/WPA2 8-64 ASCII characters (Independent automatic selection whether WPA or WPA2)
- Kanal: Selection of the connection channel

for operation mode Router:

WAN configuration

Next you have to configure how your device should be connected with the internet / WAN.

WAN interface:

IP settings

IP configuration: DHCP
 manually

IP address:

subnet mask:

gateway address:

back

next

WAN interface:

IP settings:

- IP configuration:

- IP address:

- subnet mask:

- gateway address:

Set the WAN interface from LAN-A, LAN-B oder WLAN

DHCP (Parameters come from a DHCP master on the network)

Manuell (fields IP Address + Subnet Mask + Gateway Address must contain valid values)

IP address of the device

Subnet mask of the device

Gateway address of the device

LAN configuration:

Determine the interfaces that should be connected to the local network

LAN configuration

In the last step you have to configure how your device should be connected with the local network.

interfaces: LAN-B
 WLAN

IP settings

IP configuration: DHCP
 manually

DHCP server: enable

IP address:

subnet mask:

WLAN settings

search:

mode:

SSID:

security type:

channel:

back

save

IP settings:

- IP configuration: DHCP (Parameters come from a DHCP master on the network)
Manuell (fields IP address + subnet mask must contain valid values)
- DHCP-Server: Device is a DHCP server on the selected interfaces
- IP address: IP address of the device
- subnet mask: Subnet mask of the device

WLAN settings:

- Search: Searches for accessible WiFi networks and lists them; by clicking on an entry, the selected WiFi network is used for connection
- Modus: Access-Point (AP) [the CONNECT-Router opens its own WiFi]
Client [the CONNECT-Router connects to an existing WiFi network]
- SSID: Name of the connected or created network
- Sicherheitsstufe: Open (no encryption)
WEP (either 5 or 13 ASCII/10 or 26 hexadecimal characters)
WPA (8-64 ASCII characters)
WPA2 (8-64 ASCII characters)
WPA/WPA2 8-64 ASCII characters (Independent automatic selection whether WPA or WPA2)
- Kanal: Selection of the connection channel

By "Save" the selected configuration is adopted. The device is ready for use in the specified operating mode after a short waiting period (maximum 10s).

You need the following operating modes for the following situations :

Situation	Operating mode	WLAN mode	Particularities
With a laptop around the S5/7 PLC + CONNECT-Router	Bridge	Access-Point	PLC via S5/7 LAN on LAN-A port, additional LAN participants on LAN-B port
Bring S5/7-PLC or LAN-participants into the existing WiFi network	Bridge	Client	PLC via S5/7-LAN / LAN-participant on LAN-A port, additional LAN-participant on LAN-B port
Create a separate subnet for connected devices	Router	Access-Point	LAN-A port to the company network, LAN-B port + WLAN to the machine network (Don't forget routes in the company network)
Extend LAN route Attention: 2 devices are required	Bridge	1. device Access-Point 2. device Client	One device as AP and the second as client

After selecting the configuration, save it in the device and after a short initialization time (max. 10s) the devices are ready for operation.

You can find out more about the operating modes in the device manual on the CONNECT-Router product page.

Menutree Website:


- + Products / docu / downloads
- + Hardware
 - + Router 3G / WLAN/WIFI
 - + CONNECT-Router-devices
 - + CONNECT-HS-Router

QR-Code Website:




Please make sure to update your drivers before using our products.

Data backup S7-PLC PN-port on FTP-server via dig. IO

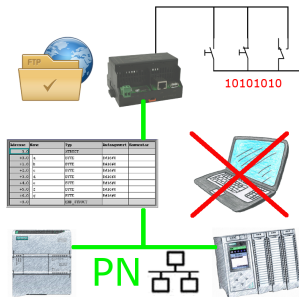


Via digital input triggered DB-backup/-restore without additional PC via PN-port to FTP-server

Data backup S5-PLC on USB-stick

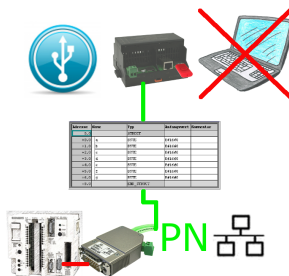

S5-PLC triggered DB-backup/-restore without additional PC via PG-socket and Ethernet on USB-stick


WinTELEPROF-software = software-PG-TELE

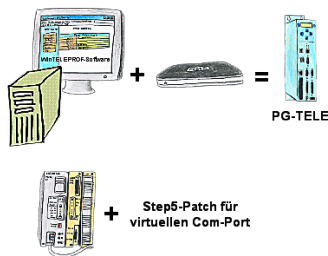

You're using the devices of the Tele-Network-family and don't want to have a device standing on the table? No problem. Install the WinTELEPROF-software on your PC and after link connection access to your Step5/7-programming software (also Siemens) via a virtual Com-Port.

At Step5 the Step5-software is going to be patched, then working with the virtual Com-Port will be also possible.

EtherSens-cloud

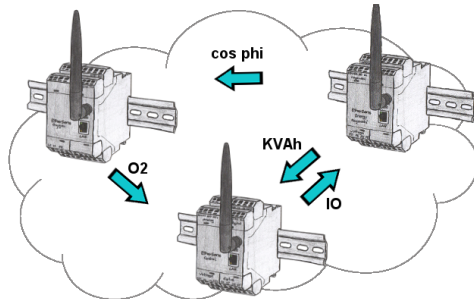

By the EtherSens-cloud each EtherSens-device can exchange data, transfer data and forward to other devices. As if you use one device that records all necessary parameters centrally.

Use on-site without PC-adapter?



With the TeleService-device you can connect serial or by USB-cable to your PC/laptop and then communicate directly with the control without a PC-adapter or other S7-programming cables.

The USB-cable is a standard-cable just as the one you use at your printer.